

BEST RENTALS, INC.

Two Locations To Serve You Best



1250 S. CHURCH ST.
ROCKY MOUNT, NC 27803
(252) 446-6678
(252) 446-2511 FAX

6685 WARD BLVD.
WILSON, NC 27893
(252) 291-2027
(252) 291-9523 FAX

Bouncer Operating Instructions

IT IS YOUR RESPONSIBILITY TO FOLLOW THESE RULES:

1. Adult supervision is required at all times.
2. For 15' Jump, 8-10 Children at one time, or 5-6 Adults. For 13' Jump, 5-7 Children. For 10' Jump, 3-4 Children, For 8' Jump, 3-4 Toddlers.
3. Jumpers should be the same age group and relative size.
4. Users must remove shoes, eye glasses, and jewelry. Empty all pockets of any hard or sharp objects.
5. No Food, Drink, Gum, or Candy in unit.
6. **No Silly String in or around unit.**
7. Unit must be anchored down properly with Anchors provided.
8. Area required must be flat & free of animal droppings, stones, stumps, etc.
9. For the safety of all users, all outdoor use must have GFCI Ground Fault protection. All inside use must have proper grounded outlets (3-prong).
10. For the safety of all users, Extension cord must be for outside use, grounded, (3-prong) & **Max. 50' Long. ***DO NOT ADD TO THE LENGTH OF EXTENSION CORD.**
11. If unit becomes soft or starts to deflate, exit jumpers immediately and then check connections.
12. Any persons under the influence of drugs, alcohol, or acting in a rowdy or dangerous fashion must be removed immediately.
13. If severe weather should arise, close ride immediately.
14. **DO NOT LEAVE UNIT DEFLATED IN RAIN OR OVERNIGHT. ROLL UP UNIT THEN COVER WITH TARP WHEN NOT IN USE.**

 
By signing below, I hereby acknowledge that the above instructions were reviewed by me and that I understand the same. I am responsible for instructing all guests and invitees how to properly use the bouncer. I also understand and acknowledge the risk of any and all injuries to anyone using this equipment and for the property damage caused by same and indemnify and Hold Harmless Best Rentals, Inc. for any such injuries or damage.

Signature _____ Date _____

**IF THERE ARE ANY PROBLEMS OR QUESTIONS, PLEASE CALL
US IMMEDIATELY AT (252) 886-1217 OR (252) 883-2662.**

SETTING IT UP

The space walk has four parts – the unit, blower(s), extension cord(s) and anchors. Select an area...

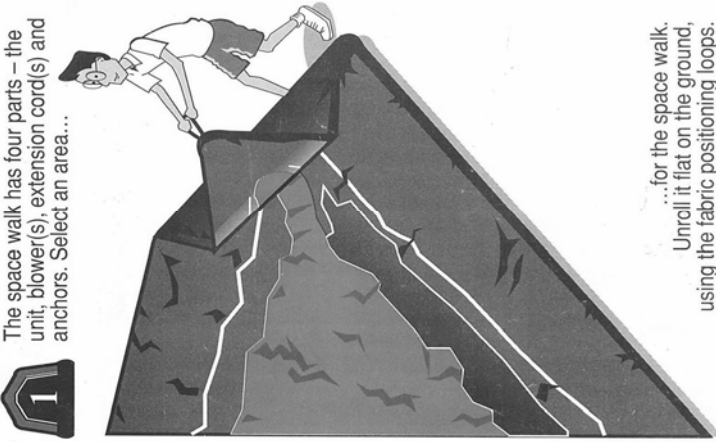

...for the space walk.
Unroll it flat on the ground, using the fabric positioning loops.

Using only one 50 foot extension cord for each blower.

Do NOT ADD TO THE

50' Extension Cord



Plug each blower into a 115 volt electrical outlet. Make sure the outlet has either a SLO-BLO 20 AMP fuse or 30 AMP fuse circuit. The blower should be the only thing plugged into that circuit. If two blowers are required they must be on separate circuits.

 
 
Using straps (bundle ties) provided, tie all vents and air release stubs in the closed position.



Slip the six foot tube in the rear of the space walk snugly around the blower outlet and secure it with the draw string.



Inflation takes five minutes. The blower runs continuously while the space walk is in use. Once inflated, unit can re-positioned then anchored into final position.

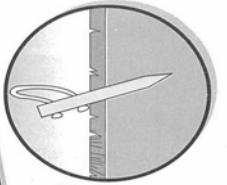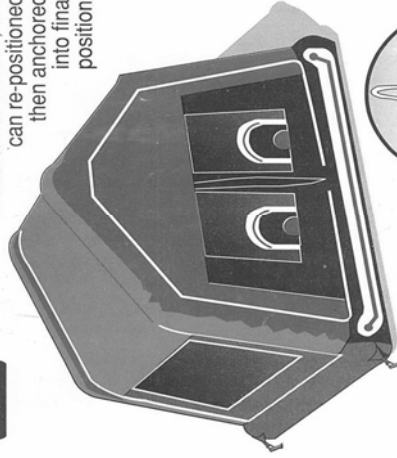

Space Walk must be anchored

Hammer wood stake into ground and then tie rope from unit to anchor. Stake should be within 12 inches from unit to prevent tripping. To test the anchor pull up with a firm lifting force to assure the it is secure.

TAKING IT DOWN

Remove riders from the unit and unplug blower. Disconnect the blower from the unit and open the air vents.

CAUTION: Do not jump on partially inflated unit.



When the unit is deflated, fold each side to the center allowing one side to overlap the other.

 
Next, fold in half again to form single width.

Do NOT Leave Spread Open In Yard when NOT IN USE!



Starting from the door, roll the unit toward the rear pushing any excess air from the space walk.

Place tie straps under the unit; tuck in the tubes and tie the bundle so it is secure.

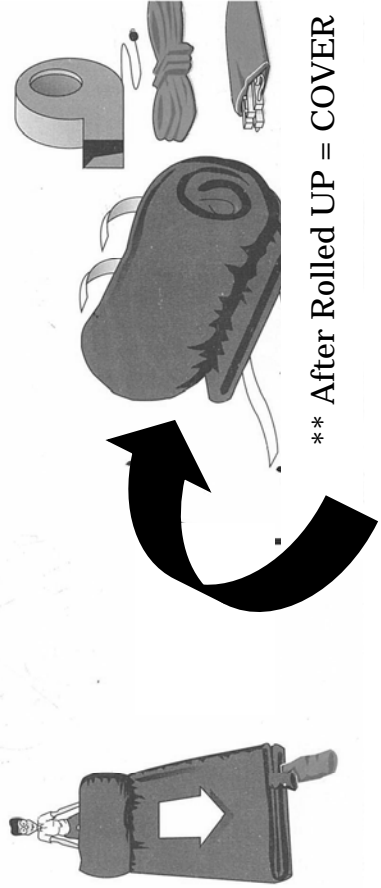

**** After Rolled UP = COVER**

Pre Operations Inspection Checklist and Operator/Attendant Responsibility Checklist

The following checklists are to be performed together in the presence of the Owner/Operator and the Renter upon each installation and setup of each inflatable ride and game. Failure to read, understand, and follow these rules could result in injury.

Date _____ Serial Number _____ NJI Game _____

Renter Name _____ Driver/Attendant Name _____

Renter Initials	Owner/Rep Initials	Operator/Attendant Responsibilities	Inflatable Game	Comments/Action Taken	Operator/Attendant Responsibilities	Owner/Rep Initials	Comments/Action Taken
		Weather conditions are safe for operation of all games			Supervision by an adult trained attendant is required at all times		
		Vinyl/Patterns Clean and free of stains			The Operator/Attendant should point out and make all riders aware of the Rules posted on the side of the game.		
		Seams, and mesh are secure and in good condition			The inflatable MUST BE securely anchored at all times		
		Tie down straps are strong with no breakage			Entry into the inflatable device should be orderly and in a controlled manner.		
		Inflatable is staked in place, and will be anchored at all times			Riders should be of similar age range, height, and weight. Do not put older children or adults with younger children.		
		Inflatable is secured by sand bags, and will be anchored at all times			NO: Riders under the age of 3 years old		
		Entrance safety net is secure and in place			NO: Shoes, eyeglasses, jewelry, or other sharp objects		
		Entrance/Exits clear of obstructions and will remain clear			NO: Somersaults, diving, wrestling, rough play, or flips.		
		Entrance ramp is secure and attached			NO: Food, drinks, gum, pets, or silly string.		
		Warning signs are clear and visible			Do not jump onto or off of the ride.		
		Internal air pressure is sufficient to give a firm footing,			Use of whistles and signaling devices is recommended		
		No debris or sharp objects are present			Keep patrons away from the blower at all times		
		Passageways are clear of obstructions			DO NOT USE: and immediately deflate the inflatable if wind conditions exceed 15 mph and/or it rains		
		Ropes and footholds are strong and intact			For Rides with Climbs and Slides		
		Slide area is controlled by overhanging, cover			Go down the slide feet first only, and no more than one rider at one time.		
		Inflatable is clear of any utility lines 20' above ground, laterally, and not exposed below ground			NO: climbing up the slide the wrong way		
		Accessories (If Applicable)			NO: jumping onto the slide area		
		Blower is clean, and firmly attached to the inflatable			Emergency Procedures		
		Blower is working and plugged into a GFC 110v outlet			<i>In the unlikely event of a severe Weather Alert, Power Failure, or a Medical Emergency:</i>		
		If using a generator, use all manufacturer's guidelines for operation			Exit patrons in an orderly fashion away from the game. Turn off the blower and unplug from the outlet		
		Electrical cords are free from wear and do not pose any trip hazards to patrons or guests			Keep patrons and guests away from the inflatable		
		Misters are firmly attached and working			Call the appropriate emergency responders if necessary		
		Jousting poles are clean, strong, and secure					

I have been instructed in and understand the Operator/Attendant Responsibilities and Emergency Procedures listed above.

Renter Name _____ Date _____
 Owner/Rep _____ Date _____

I have inspected the inflatable unit(s) and find all items satisfactory and acceptable.

Renter Name _____ Date _____

OWNER'S MANUAL

B-AIR BLOWER

BEAR POWER

MODEL # BP-1

INTRODUCTION

- OPERATION
- SAFETY
- SERVICE
- WARRANTY
- CONTACT
- SPECIFICATIONS
- TROUBLESHOOTING



SAFETY

- 1) BLOWER MUST HAVE BACK PRESSURE, MEANING IT MUST BE ATTACHED TO AN INFLATABLE OR DUCT TO AVOID ANY DAMAGE TO MOTOR.
- 2) KEEP CHILDREN AWAY FROM UNIT AT ALL TIMES WHILE IN OPERATION AND/OR PLUGGED IN.
- 3) DO NOT PUT FINGERS OR OTHER OBJECTS IN UNIT WHILE IN OPERATION AND/OR PLUGGED IN.
- 4) DO NOT OPERATE IN POOLED WATER TO AVOID ELECTRIC SHOCK.
- 5) MOTOR MUST BE KEPT DRY AT ALL TIMES. IF UNIT BECOMES WET, THOROUGHLY DRY BEFORE NEXT OPERATION.
- 6) INDOOR USE: USE ONLY WITH A GROUNDED PLUG AND/OR EXTENSION CORD TO AVOID RISK OF ELECTRICAL SHOCK OR FIRE. REMEMBER NEVER TO USE A CORD WITH ANY KIND OF DAMAGE OR WEAR.
- 7) MAKE SURE THE POWER SOURCE IS SUFFICIENT TO MEET THE REQUIREMENTS OF THE BLOWER.
- 8) KEEP AIR INTAKES CLEAR AT ALL TIMES TO AVOID CLOGGING OR BLOCKING IN ORDER TO PREVENT OVERHEATING THE UNIT. BLOCKING THE AIR INTAKES COULD RESULT IN A FIRE OR ELECTRICAL HAZARDS.
- 9) DO NOT REMOVE ANY SCREENS OR SAFETY GUARDS FROM THIS UNIT TO PREVENT INJURY TO PERSONS, AND TO AVOID OBJECTS FROM COMING IN CONTACT WITH THE BLOWER WHEEL. UNIT DAMAGE IN THIS MANNER WILL VOID YOUR WARRANTY.
- 10) DO NOT OPERATE UNIT CLOSE TO ANY DANGEROUS AREAS, SUCH AS EXPLOSIVE GASES, FLAMMABLES, HEATERS AND VENTILATED ENVIRONMENT, WHICH MAY RESULT IN EXPLOSIONS OR ELECTRICAL HAZARDS.
- 11) DO NOT USE ANY FORM OF SPEED CONTROL DEVICE AS DOING SO MAY RISK INJURY OR FIRE.
- 12) ALWAYS PLACE BLOWER ON A SMOOTH AND LEVELED SURFACE FOR SAFE OPERATION.
- 13) DO NOT OPERATE IN STACKED POSITION.
- 14) DO NOT USE UNIT IF DAMAGED.
- 15) BEFORE CLEANING OR SERVICING UNPLUG UNIT.
- 16) ALL BLOWERS IN OPERATION MUST BE SUPERVISED AT ALL TIMES.

INTRODUCTION TO B-AIR

YOUR NEW B-AIR BLOWER HAS A 1 HP HIGH EFFICIENCY MOTOR, WHICH HAS STATE OF THE ART CONSTRUCTION AND SCREENS ON OPEN VENTS FOR SAFETY AND LONG LIFE. THE HANDLES ARE DESIGNED FOR EASY CARRYING AND THE UNITS ARE ALSO STACKABLE FOR SPACE EFFICIENCY.

OPERATION/USE

THIS HIGH PRESSURE UNIT IS INTENDED TO INFLATE LARGE INFLATABLE PLAY STRUCTURES, BUT IS SUITABLE FOR A VARIETY OF OTHER APPLICATIONS.

- A) CAREFULLY PLACE THE B-AIR UNIT ON STABLE FLAT DRY SURFACE-KEEPING CHILDREN AWAY.
- B) ATTACH AN INFLATABLE TUBE AROUND THE EXHAUST OPENING USING STRAPS OR ANY OTHER FORM OF TIGHTENER.
- C) PLUG CORD INTO A GROUNDED GFCI OUTLET ONLY.
- D) TURN ON SWITCH AND MAKE SURE IT IS OPERATING CORRECTLY.
- E) ALL BLOWERS IN OPERATION MUST BE SUPERVISED AT ALL TIMES.

STORAGE

STORE UNIT INDOORS IN A CLEAN DRY ENVIRONMENT TO ENSURE LONG LIFE

SPECIFICATIONS

MODEL:BP-1

	REG.OUTPUT(R.O)	HIGH OUTPUT(H.O)
115 VOLT		
MAX AIR VOLUME	740 CFM	850CFM
AMPS	5.9	6.9
MAX STATIC PRESSURE	6.75	7.75
WEIGHT NET/ GR	36/40LBS	36/40LBS
UNIT SIZE (LxWxH)	20.5"x15"x18"	20.5"x15"x18"
WHEEL SPEED (RPM)	3460	3460
MOTOR	1 HP	1HP
ATTACHED CORD (14G)	25 FT	25 FT

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
Motor Not Running	a) Switch is OFF	a) Turn Switch ON
	b) Bad Outlet	b) Check Outlet/ Change to Another Outlet
	c) Faulty Switch/Cord	c) Call Factory for new Switch/Replace Cord
Scraping Noise From Blower	a) Wheel Out Of Line	a) Call Factory for Replacement Advise
Weak Air Flow	a) Obstructed Vents/Inlets	a) Clean Out Vents/Inlets